
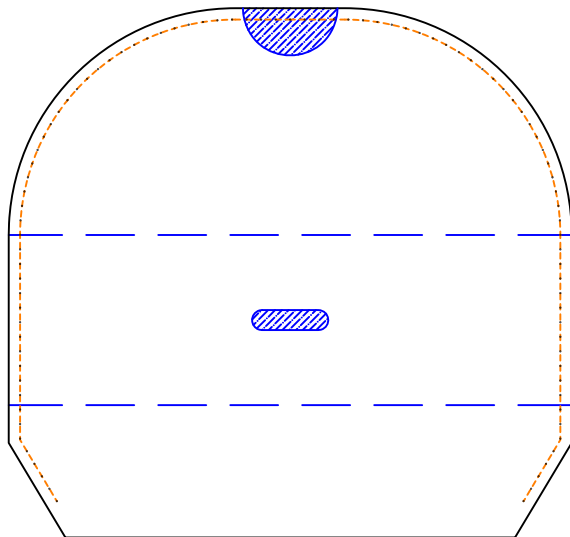
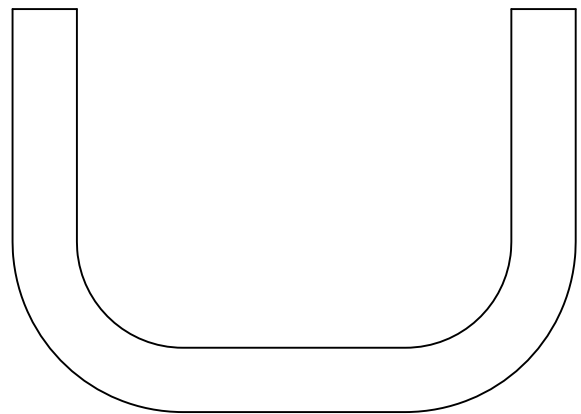


# ACC-85 Instruction


Step 1: Full paint glue and glue linings on A01, A03, A04, and A05. Sew orange stitching line on A01, sew orange stitching line on A04 and install hardware on, sew the yellow stitching line on A05, and then sew A06 on it.

Please understand that, here I just offer you are simple way to do all, you can modify some steps to hide the hardware and stitching line under linking to make the bag more charming and neat.

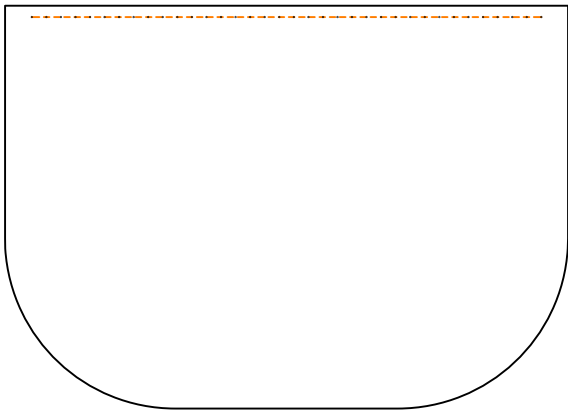

Step 2: Glue A08 on A07 and sew the bottom orange stitching line, then glue A09 on A07. Stitch orange lines on 3 sides on lining of A02.

Now Stitch A04 on A02 with green stitching line, after doing that, glue lining of A02 on flesh side of A02. By doing this, you will hide the green stitching line successfully.

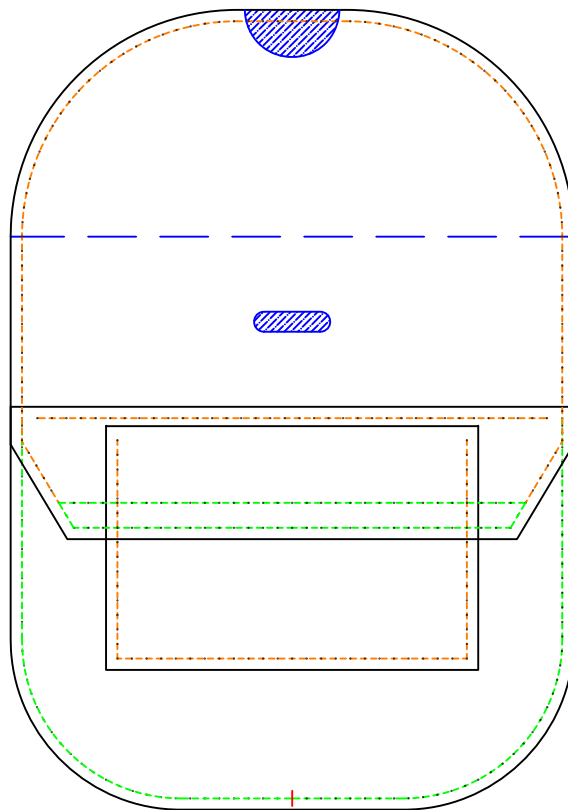

Step 3: Now, we stitch A05 with 2 pieces of A03 along the orange stitching lines. It is very very important that you should wet the edge of A05 and then mould it by your finger, to make sure there is no pleat. It is a slow step and you should have patient.

Then stitch the green lines on A03 with A01 and A02 to form this bag.

The wrist belt is very to make.

Notice:

1, You can burnish edges for aesthetic if you use vegetable tanned leather and use edge paint for aesthetic if you use chrome tanned leather;

2, 1oz=0.4mm;

3, Here is the line instruction.

