

No Sew Purse

By Paintyee

Instagram: Paintyee

Instruction video on
youtube under Paintyee


Materials needed for this project:

- 5-6 oz leather (regular stiffness)
- 0.8mm thread
- 3/4in D rings 2
- 6 rivets
- Sam Browne button 6.9mm or 8mm

- Cut
- - - - - Assemble
- Align
- Punch

Straps are not included

Size reference

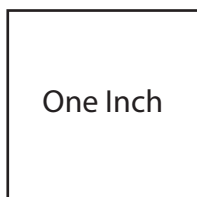

Attach to Flaps

Attach to Flaps

Front

Attach to bottom

