





Cassi Vintage

SET OF 6 WALLET PATTERNS

No pattern content may be shared or reproduced. You can sell items based on our patterns without any restriction. Thank you and have fun! Cassi

17.78 cm

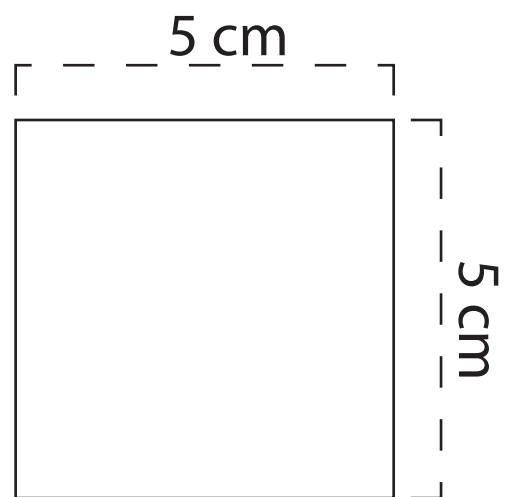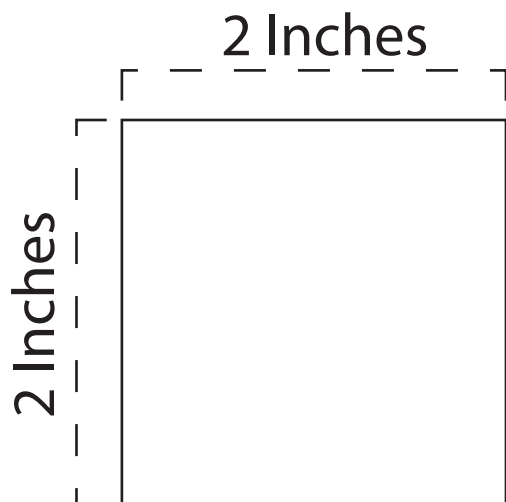

Print on any type of paper by checking
Actual size 100% and selecting A4 as the printing format.



7 Inches

WALLET 1:







- The holes on every straight line can be punched using a Crafttool **1** to **1.5** mm spaced at **4** mm.
- Print on any type of paper by checking **Actual size** 100% and selecting **A4** as the printing format.
- Highly recommended thickness of the leather piece number (1),(2) is 1.0 mm.
- Highly recommended thickness of the leather piece number (3),(4),(5),(6),(7),(8) is 0.8 mm.



WALLET 1

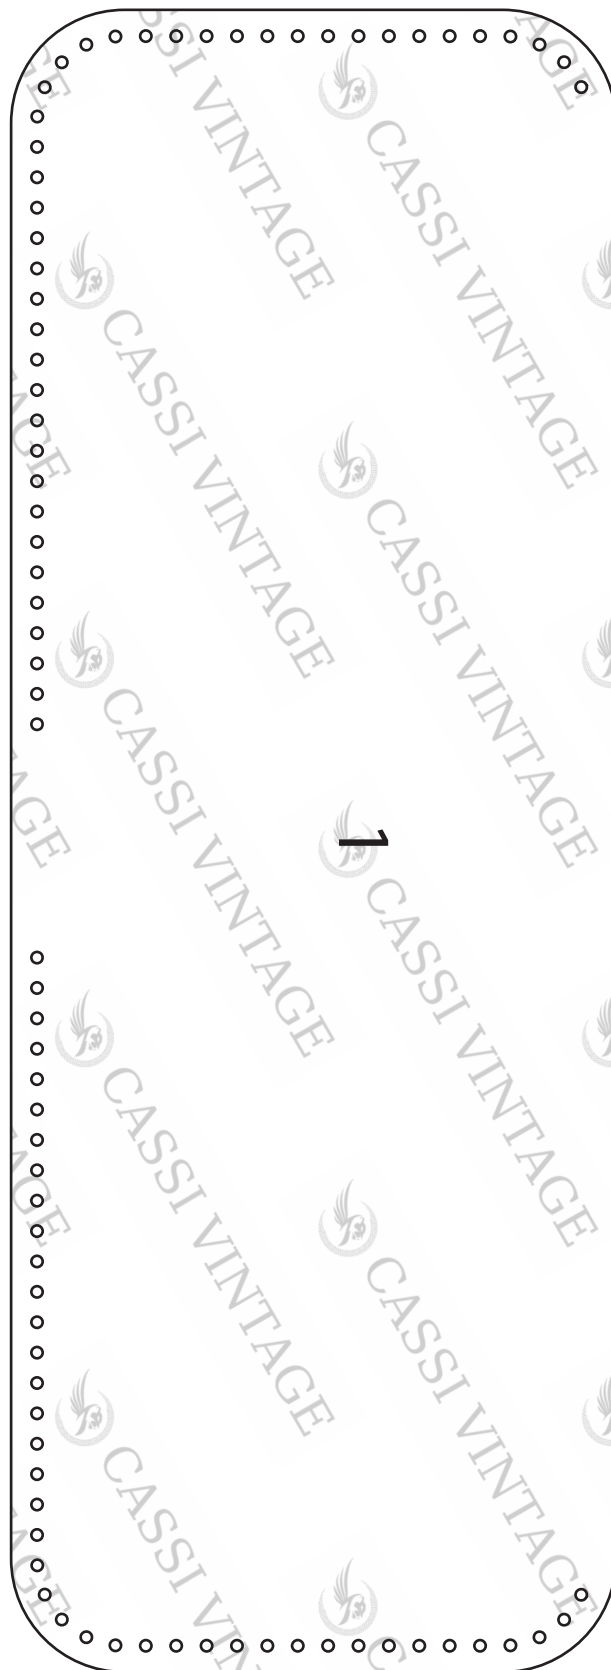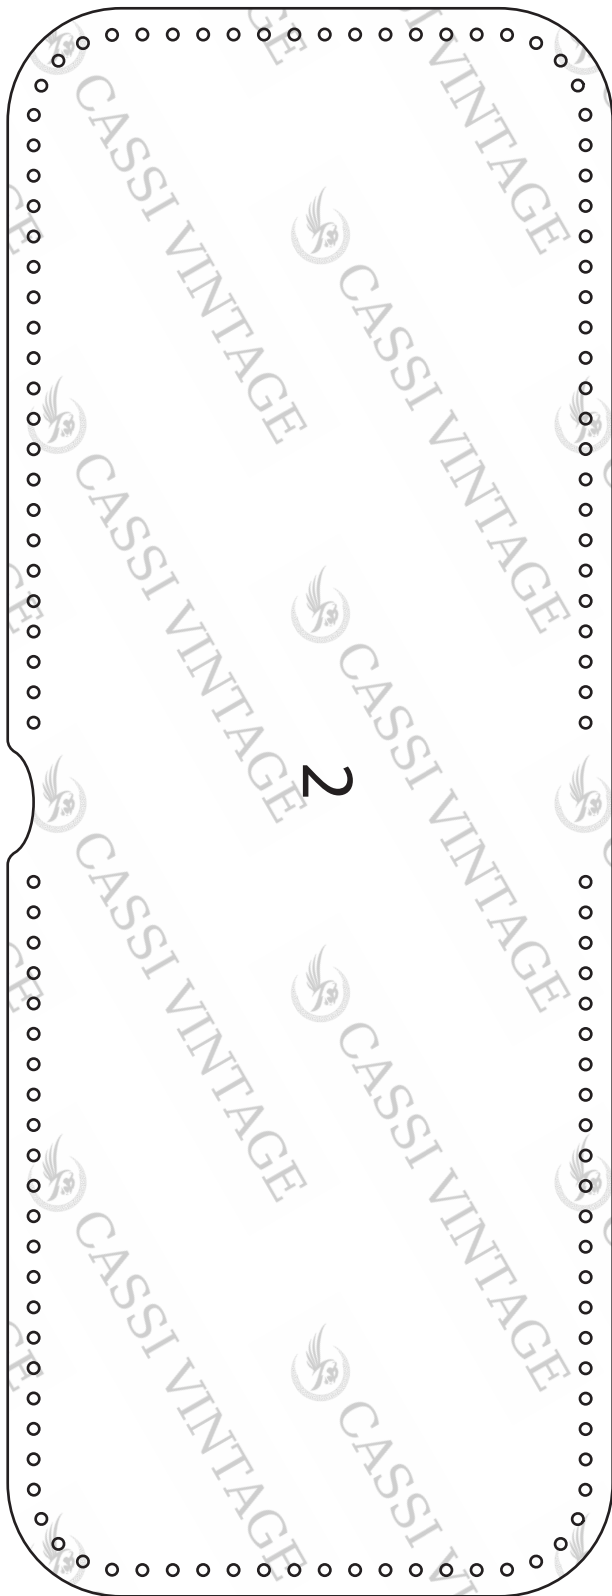

WALLET 1

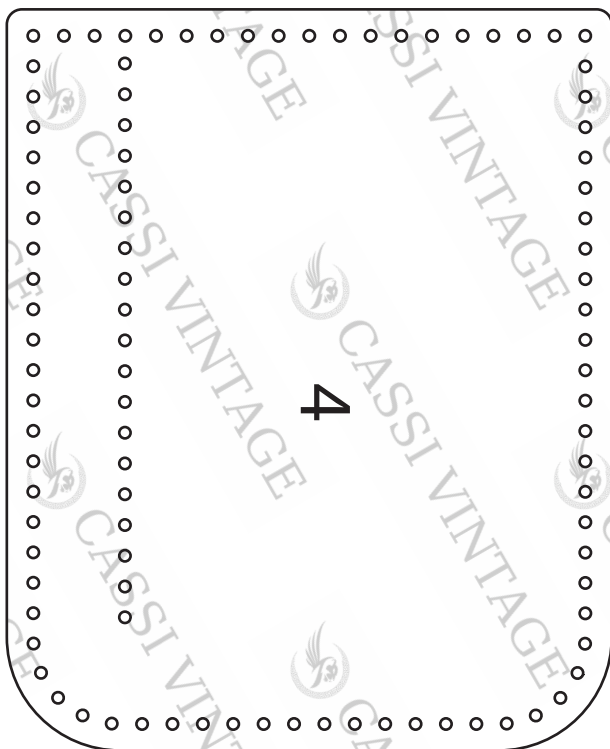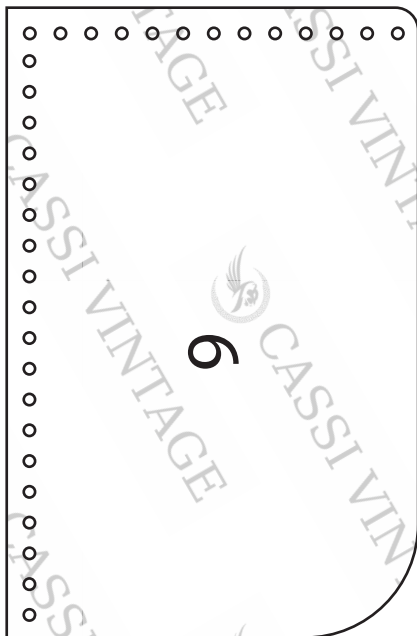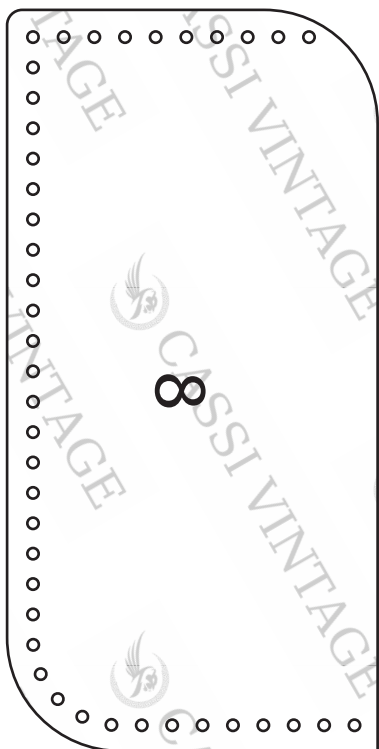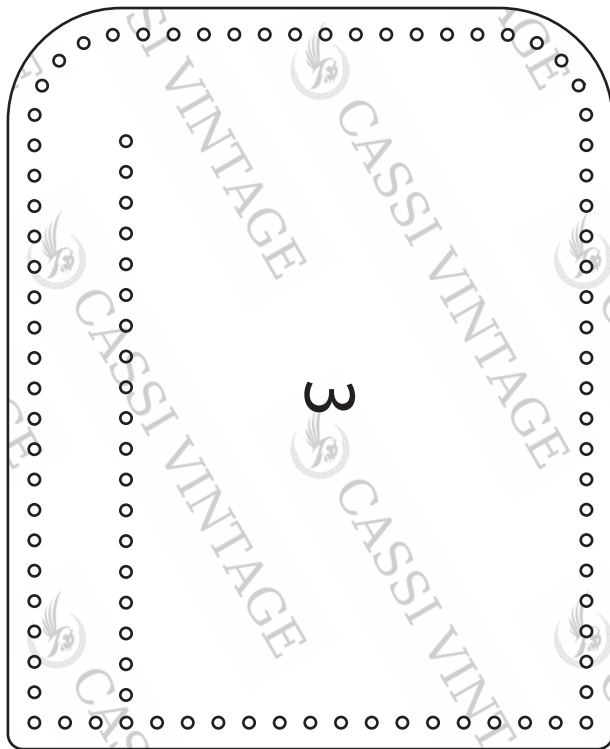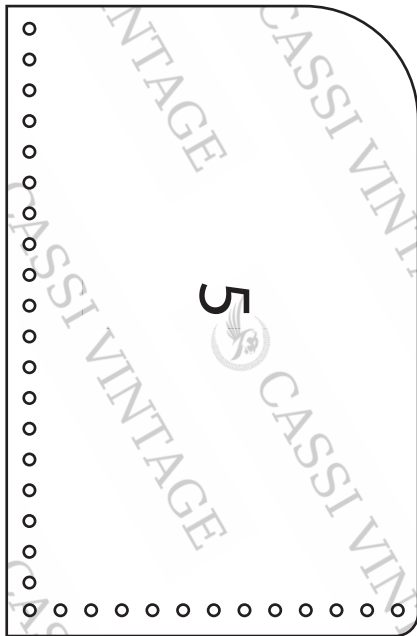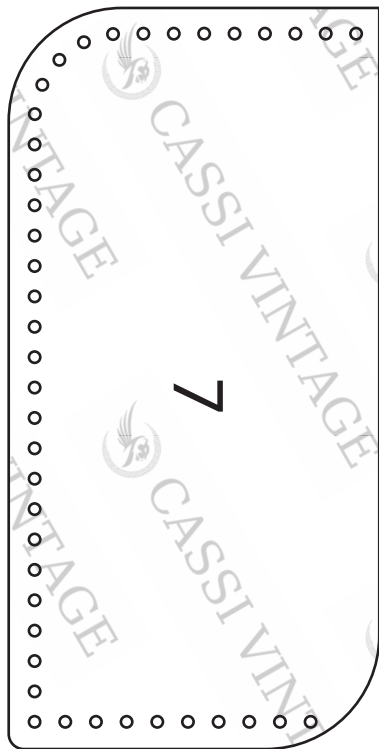

WALLET 2:



- The holes on every straight line can be punched using a Crafttool **1** to **1.5** mm spaced at **4** mm.
- Print on any type of paper by checking **Actual size** 100% and selecting **A4** as the printing format.
- Highly recommended thickness of the leather piece number (1),(2) is 1.0 mm.
- Highly recommended thickness of the leather piece number (3),(4),(5),(6) is 0.6mm.

Facebook group community: Click [here](#)







Cassi Vintage

WALLET 2

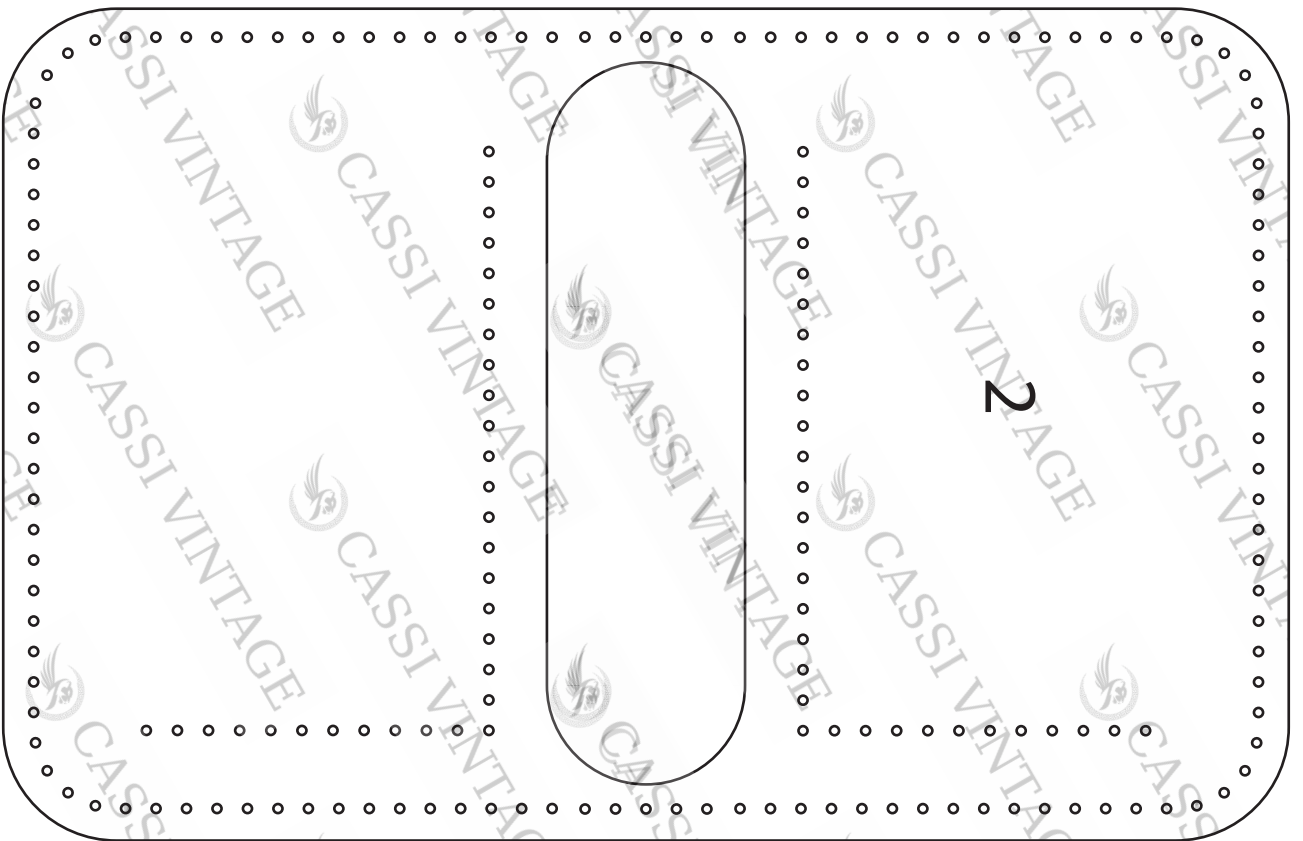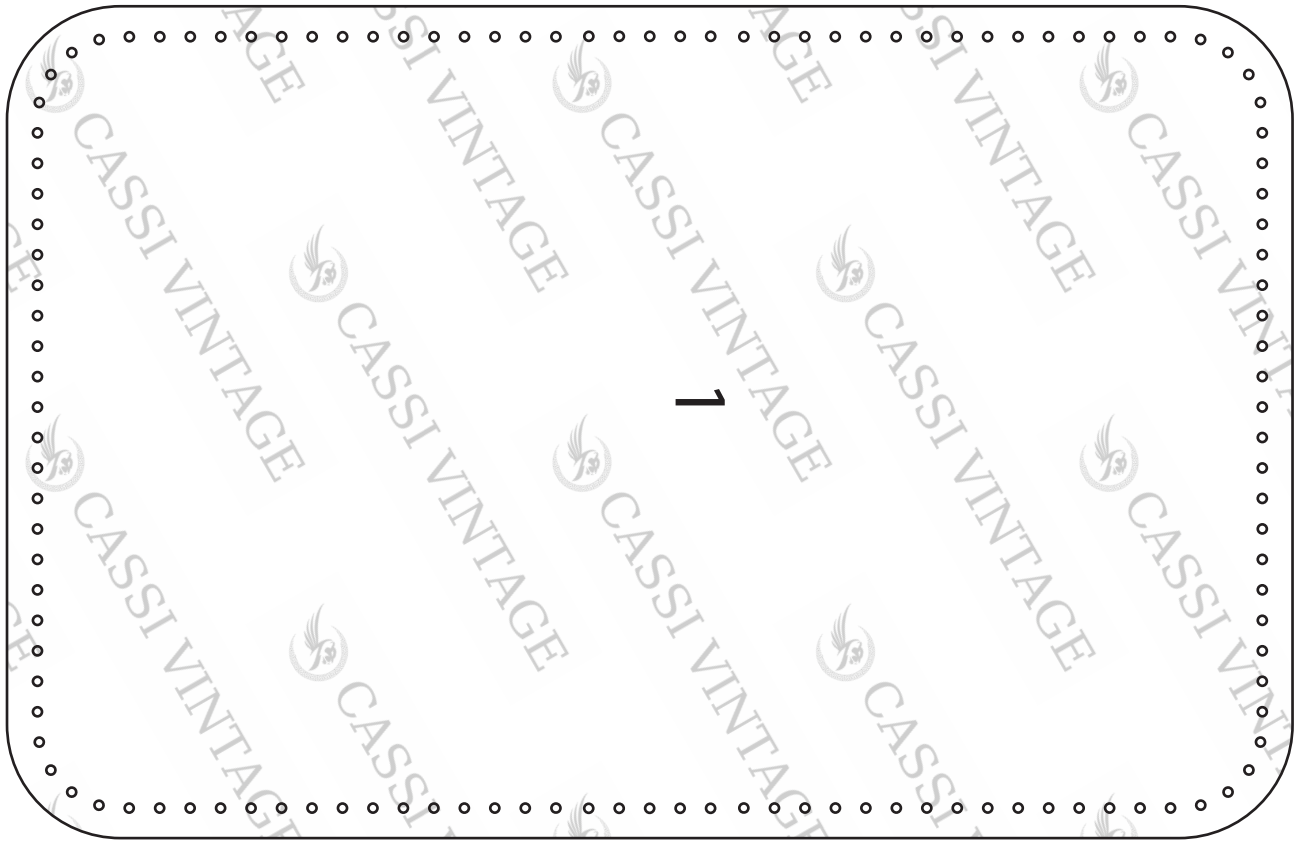

WALLET 2

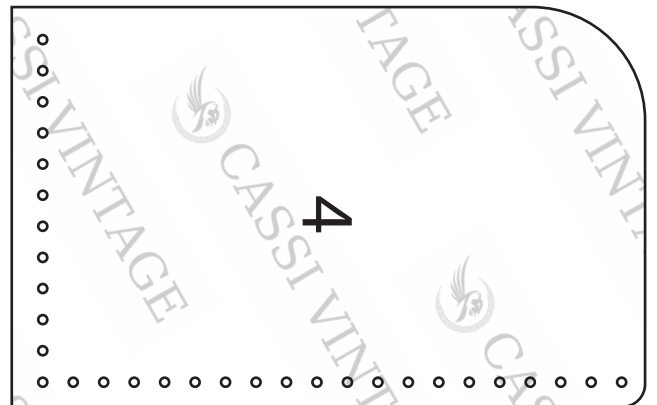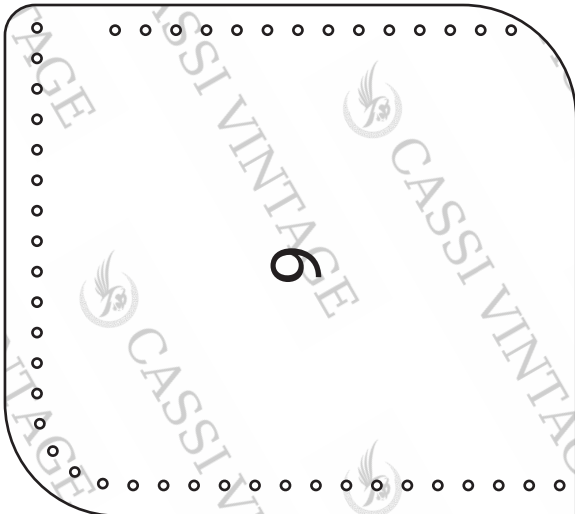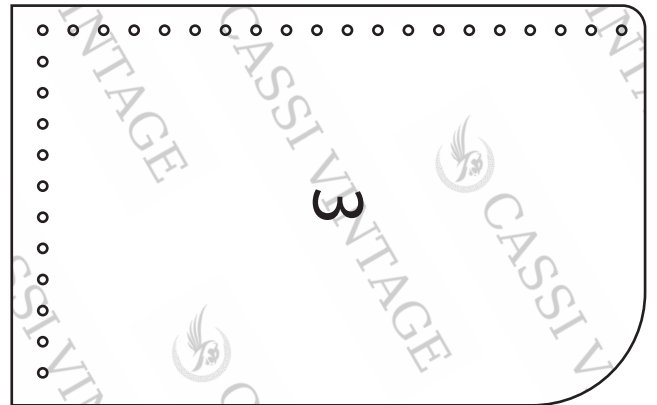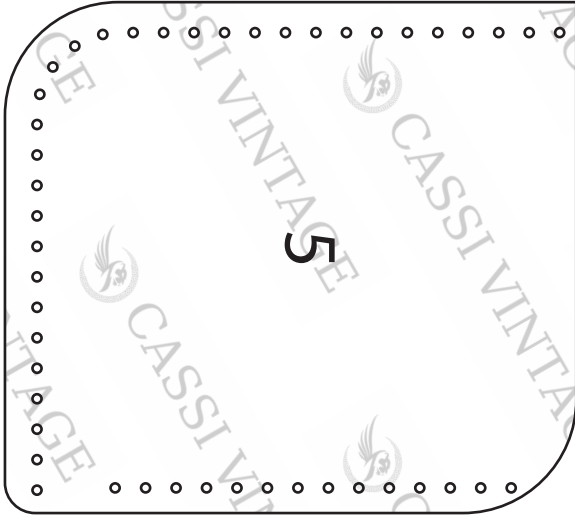

WALLET 3:





- The holes on every straight line can be punched using a Crafttool **1** to **1.5** mm spaced at **4** mm.
- Print on any type of paper by checking **Actual size** 100% and selecting **A4** as the printing format.
- Highly recommended thickness of the leather piece number (1),(2),(3),(4) is 0.8 mm.

Facebook group community: Click [here](#)



Cassi Vintage

WALLET 3

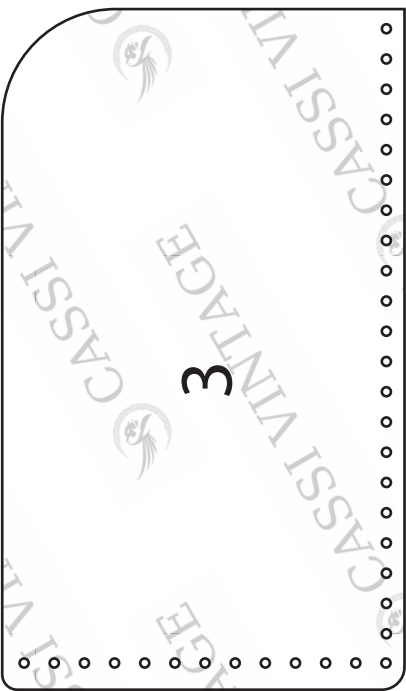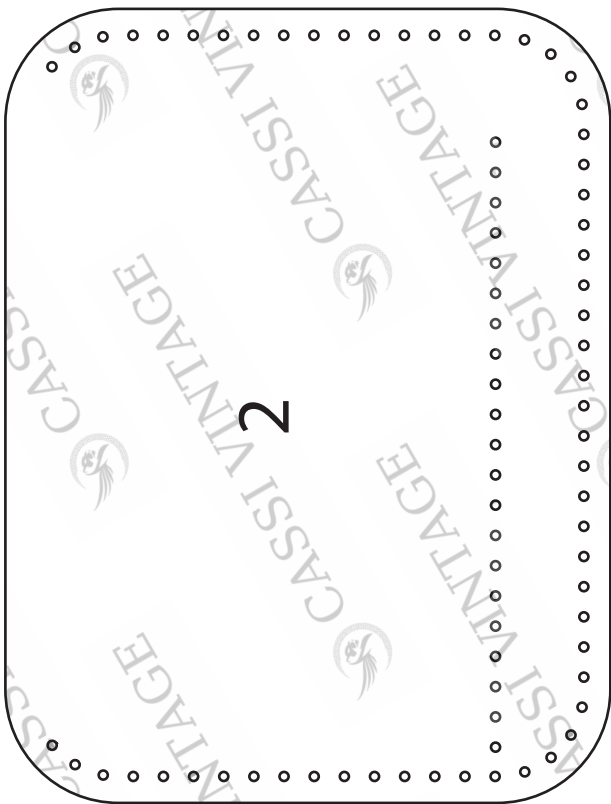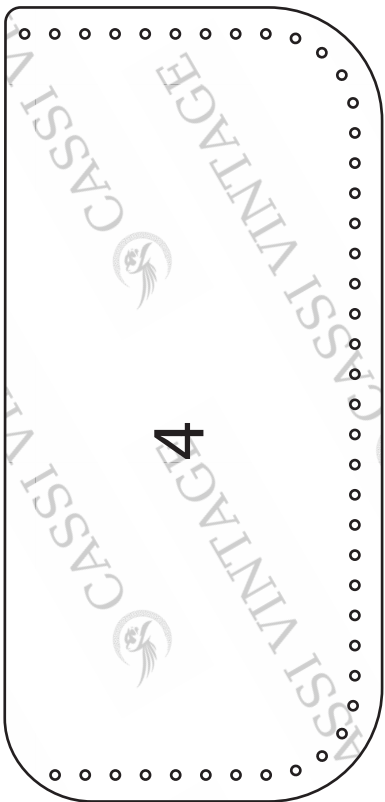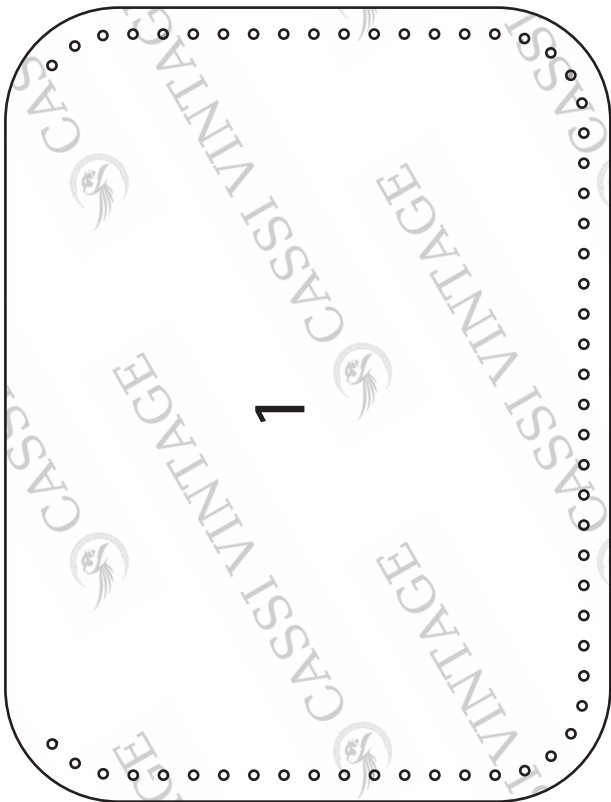

WALLET 4:





- The holes on every straight line can be punched using a Crafttool **1** to **1.5** mm spaced at **4** mm.
- Print on any type of paper by checking **Actual size** 100% and selecting **A4** as the printing format.
- Highly recommended thickness of the leather piece number (1),(2),(3),(4),(5) is 0.8 mm.

Facebook Group community: Click [here](#)



Cassi Vintage

WALLET 4

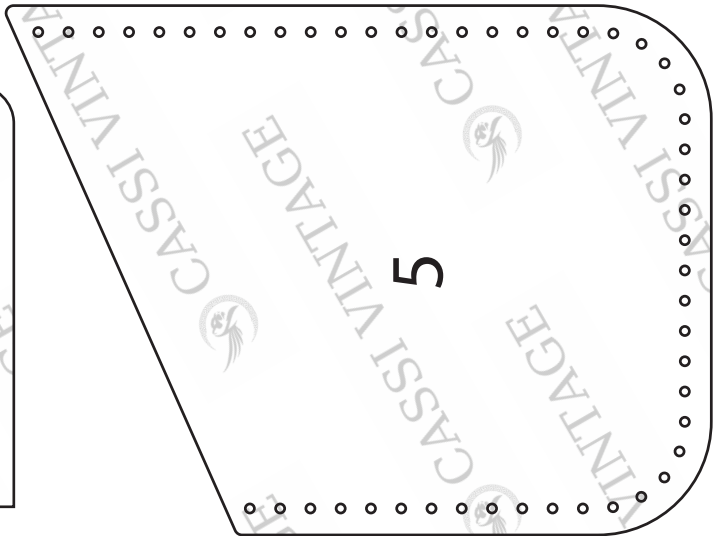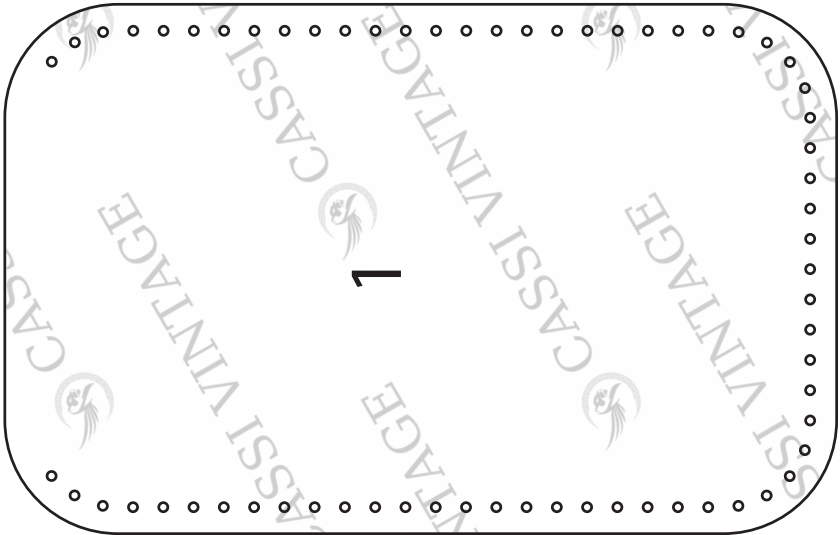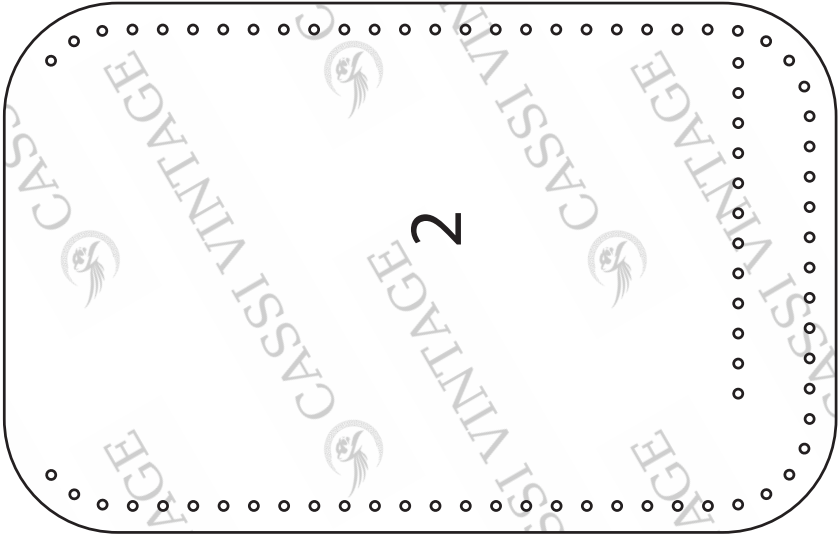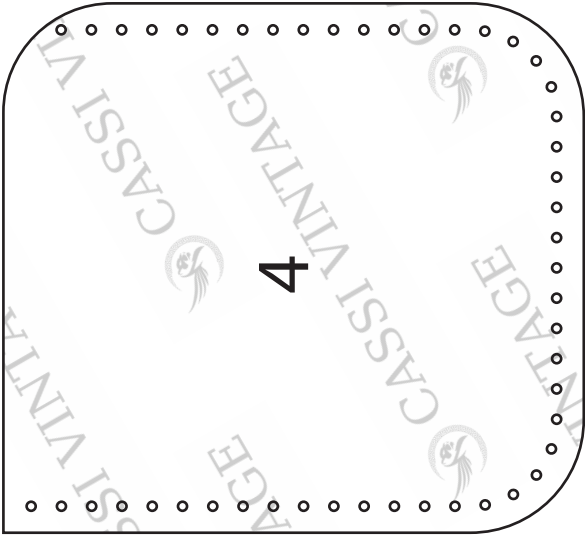

WALLET 5:



- The holes on every straight line can be punched using a Crafttool **1.5** mm spaced at **4** mm.
- Print on any type of paper by checking **Actual size** 100% and selecting **A4** as the printing format.
- Highly recommended thickness of the leather piece number (1) is 1.2 mm.
- Highly recommended thickness of the leather piece number (2),(3),(4),(5) is 0.8mm.

Facebook group community: Click [here](#)





Cassi Vintage

WALLET 5

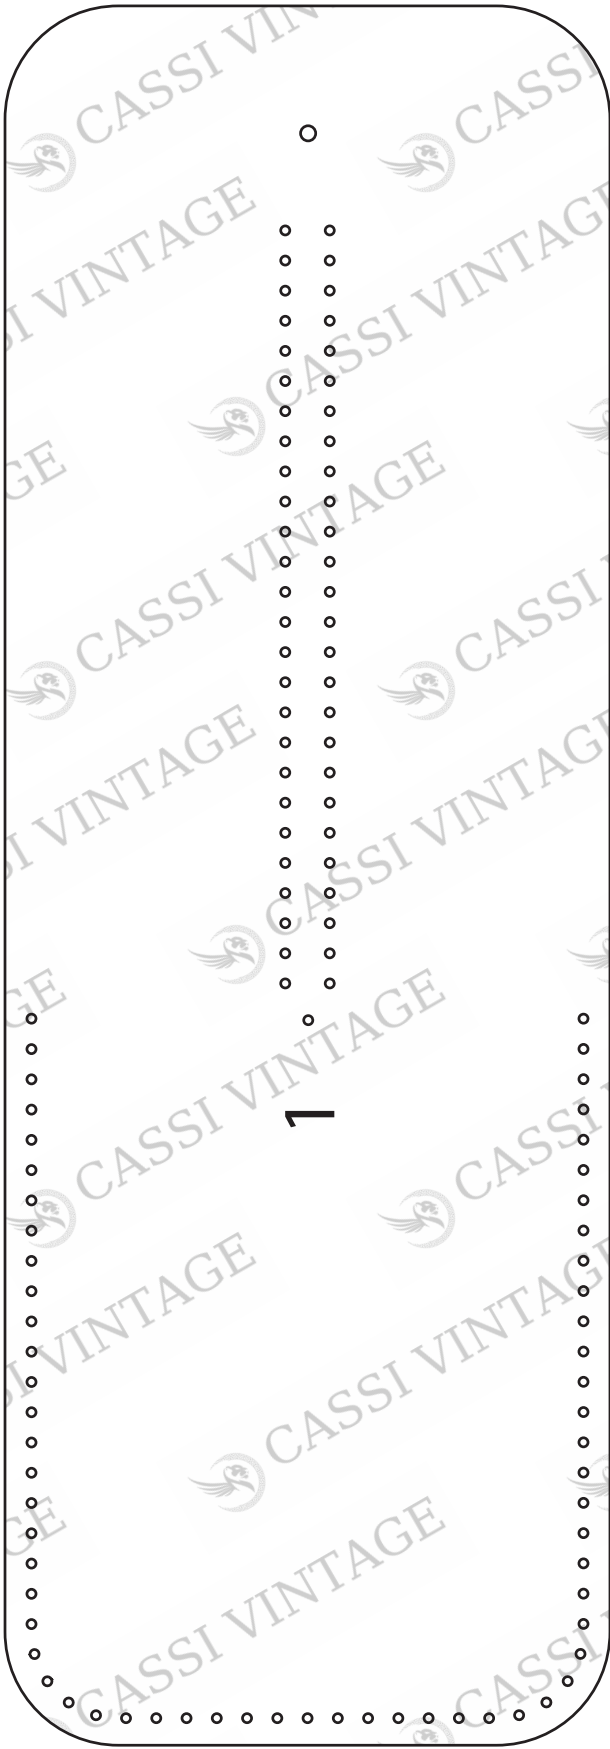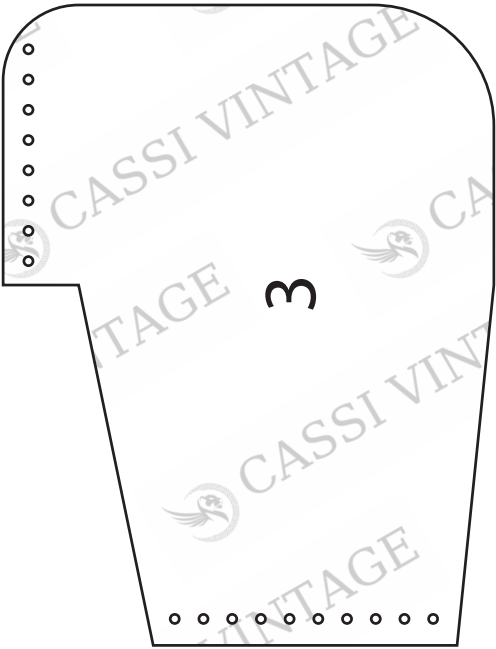

WALLET 5

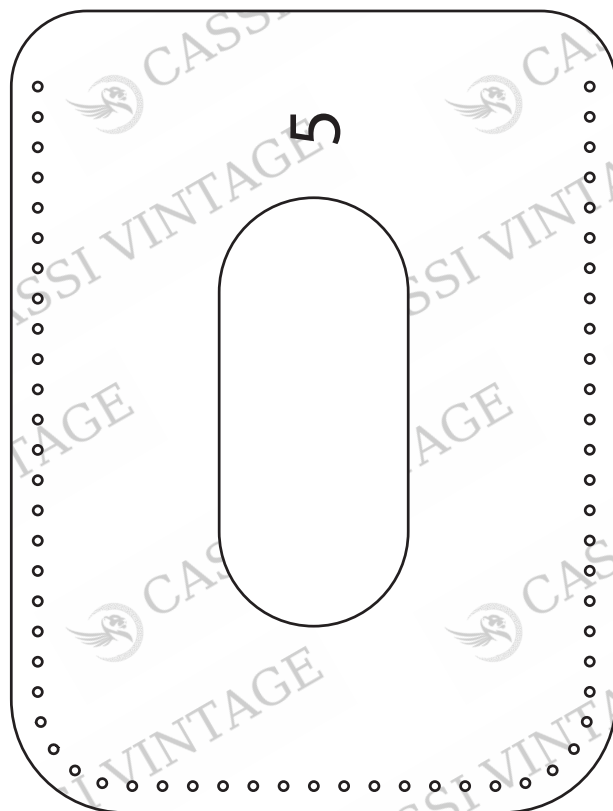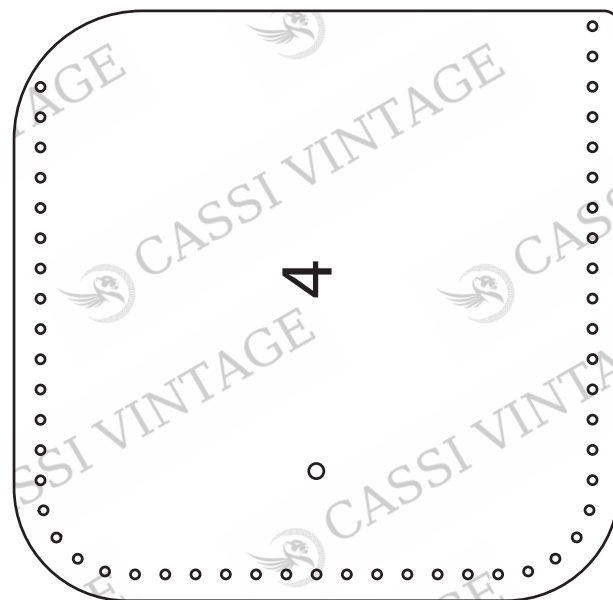

WALLET 6:

IMPORTANT NOTE:


- The holes on every straight line can be punched using a Crafttool **1** to **1.5** mm tool.
- Print on any type of paper by checking **Actual size** 100% and selecting **A4** as the printing format.
- Highly recommended thickness of the leather piece number (1),(2),(3),(4),(5),(6),(7),(10) is 0.8mm.
- Highly recommended thickness of the leather piece number (8),(9),(11),(12),(13),(14),(15),(16), is 0.5 mm.

Youtube tutorial link: Click [here](#)

Facebook group community: Click [here](#)



Cassi Vintage

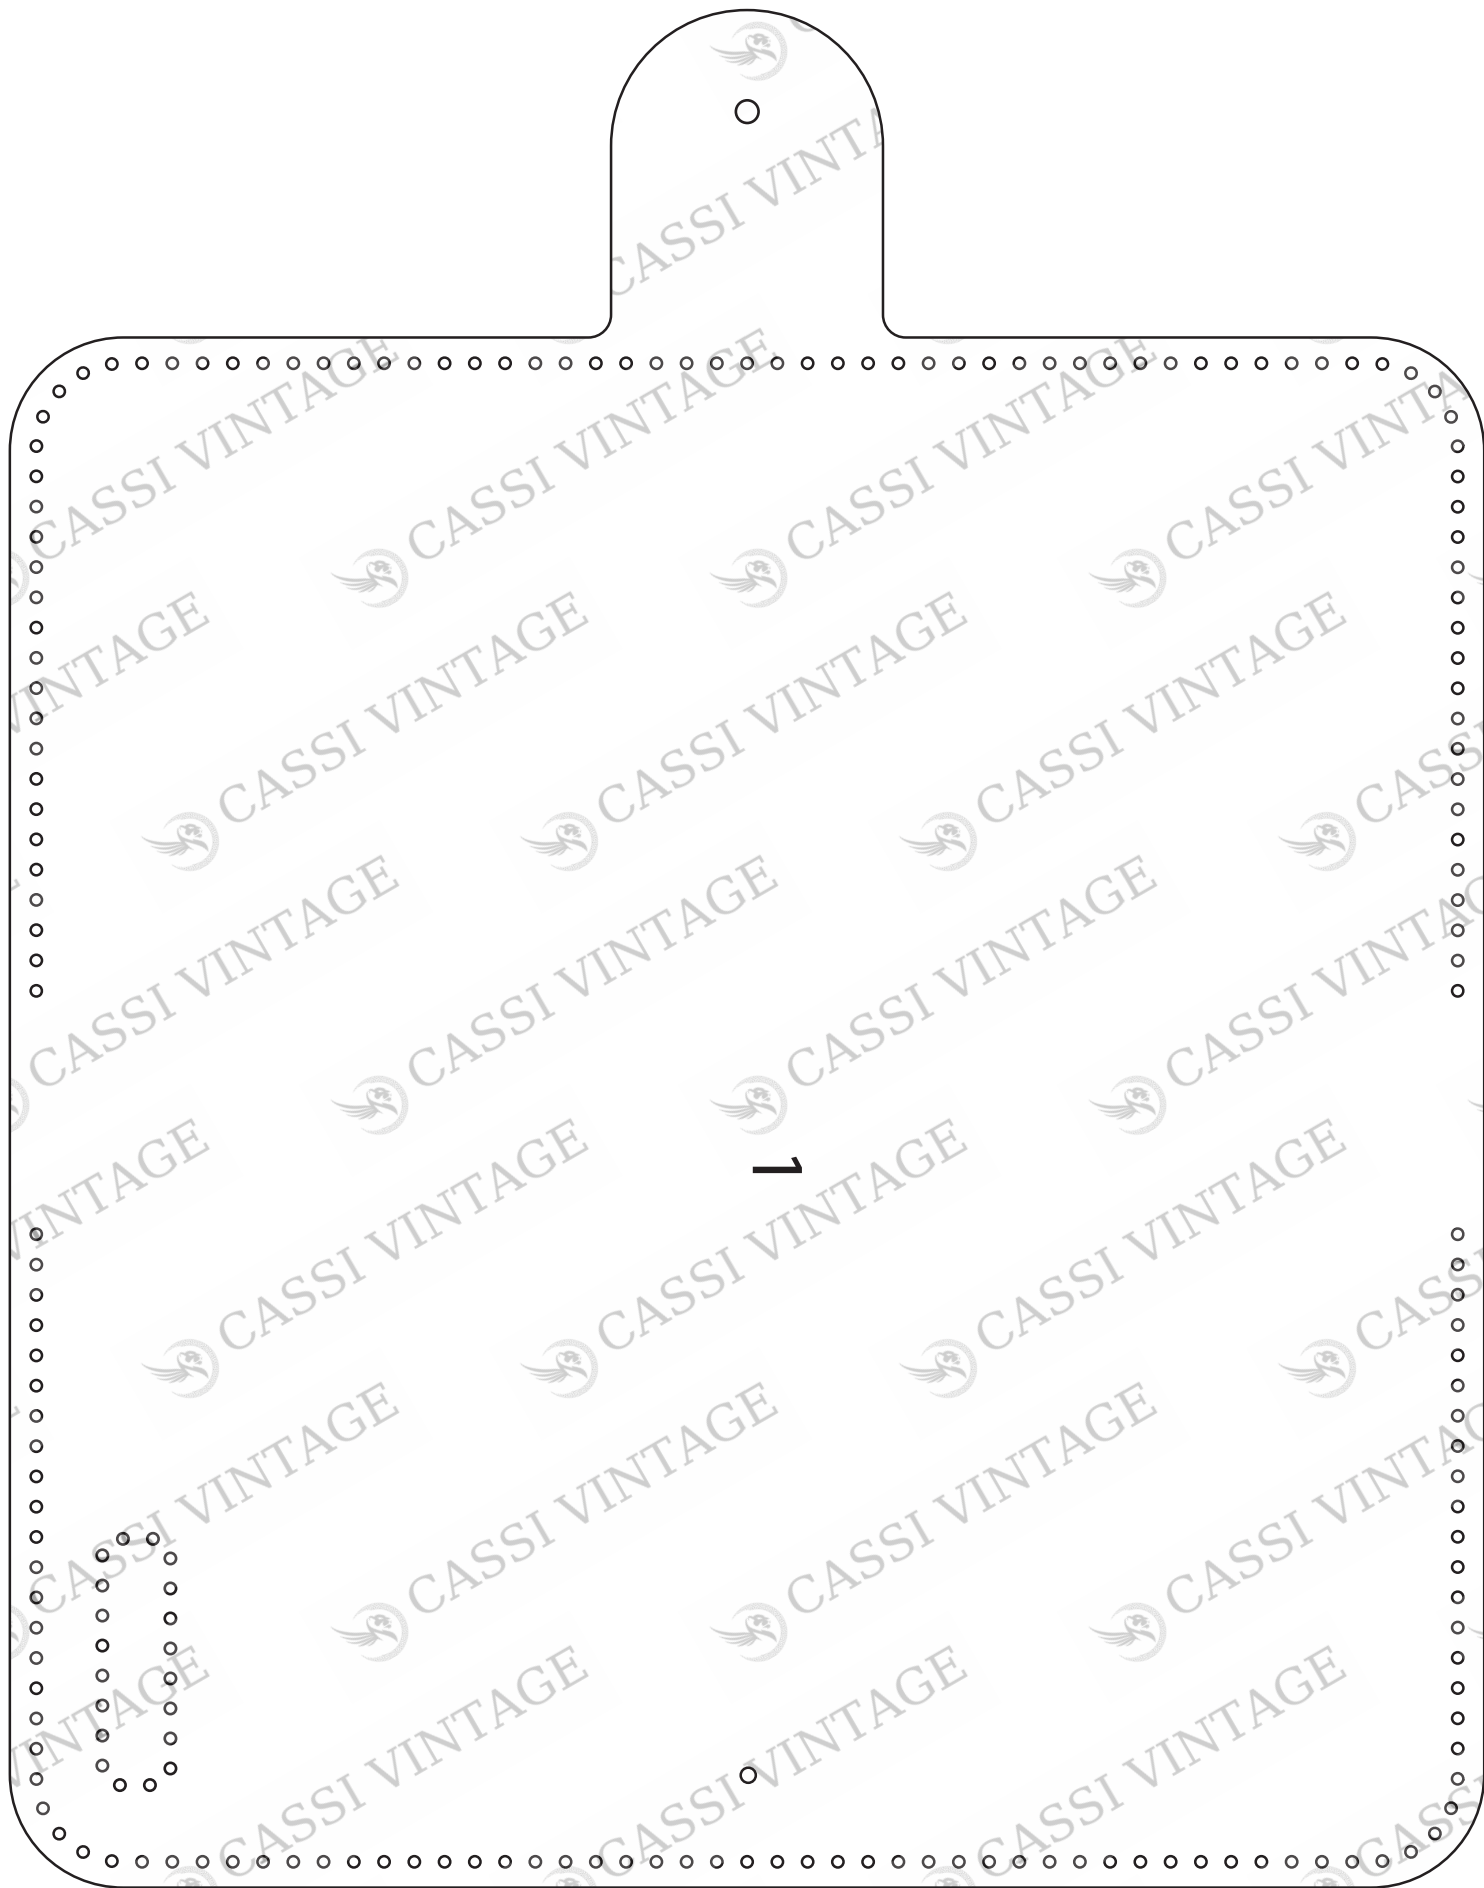

2

3

4

